 
Quick Start Guide Poooli L1



Content

acking List 1
ppearance2
sing Guide3
ownload APP5
onnection6
PP Setting7
isassemble8
eplace Supplies9
ffical Supplies Types10
afety11
12

 
Packing List



Thermal Paper Roll



Appearance



- 1 Power button
- 2 Parrot mouth accessory
- ③ USB Port
- (4) Reset button

⚠ Note: The packing materials are actually based on the order.

Using Guide

o Power Button Status

- Hold down for 3 seconds to ON/OFF
- Lighting: Standby / Charging completed
- Notify Light slow flash: Charging / Updating
- Fast flash: Supplies near end, cover open, low battery, the print head is overheated
- Charging

Use it for the first time after purchase

- Recommended to use after full charge For computer USB port charging only

In addition to the dedicated charger, you can also use the charging cable of mobile device.

Recommended to use a dedicated charging

It takes about 90 minutes to charge with 5V/1A.

■ USB Cable

cable to charge.

Print Paper Purchase

- Official website (www.poooli.com)
- From APP, Tmall, Jingdong Mall

Scan the QR code below or search for "Poooli"

Download APP

in the app store to download and install the app. :



Official WeChat service :



 


Connection



Register and log in to the app, click Add Device. Connect to the device by searching for Bluetooth or scan code.

APP Setting



- Double click the power button to print the QR code.
- Add the Scanning function by APP, then connect the device by scanning QR code.



- When the first connection succeeds, the next time you start he application that will connect Poooli L1 automatically.
- In the connection state, double click the power button to disconnect the connection.



APP setting

You can view information such as remaining power, firmware versions in

Dismantle

Disassembly

If you want to remove the parrot mouth accessory, please according to the step take them down.





If you want to attach the parrot mouth accessory, use the magnet to adsorb the parrot mouth.





Replace Supplies

Figure 1





- With reference to figure 2, push down the upper cover.
- When replacing supplies, place the supplies in reference to the direction shown in figure 3.

Place direction

Figure 3

 If the supplies are properly placed, close the upper cover to the lower cover and push the upper cover back to its original shape.

⚠ When changing supplies , do not touch the print head in case of ovweheating.

Offical Supplies Types

Self-adhesive Paper	With adhesive backing, cuttable size, can be preserved for 10 years
Ten-year Thermal Paper	Clear printing, stable color rendering, suitable for daily use, can be preserved for 10 years
Gray-scale Paper	Suitable for photo printing, waterproof, oil proof and scratch proof, can be preserved for 7 years
Label Paper	Stickers with adhesive backing, fixed size, can be preserved for 10 years
Affordable Thermal Paper	Affordable, suitable for text printing, can be preserved for 2 years
All Poooli paper	preserved for 2 years r does not contain bisphenol-A. lure is caused by using other paper, you will not be e three guarantees policy.

Safety



Battery overheating

Battery management and cautions

- When the charge is completed, please unplug the charging line.
- To avoid fire, do not charge at high temperatures(e.g. sweating rooms, bonfire accessories, etc.).



Charger attention

- Print head management and cautions
- There may be damage to the print head due to improper charging.
- We recommend not to use Poooli L1 in high humidity or dusty areas.



Combustion hazard

Print head overheating

After printing, do not touch the print head directly to prevent burn.



Charging port damage phenomenon

Charging cautions

 Please gently insert or unplug the chargingline to prevent excessive damage to the charging port.

FCC

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

harmful interference in a residential installation. This equipment

generates, uses and can radiate radio frequency energy and, if not

installed and used in accordance with the instructions, may cause

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against

particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

However, there is no guarantee that interference will not occur in a

- -- Reorient or relocate the receiving antenna.
- -- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -- Consult the dealer or an experienced radio/TV technician for help. To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance between 20cm the radiator your body: Use only the supplied antenna. FCC ID: 2APWO-C1

device management.

harmful interference to radio communications.