


Shipping Label Printer

SL42

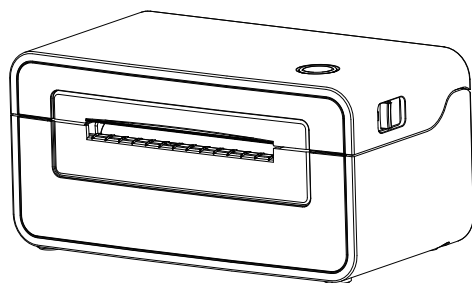


Quick Start Guide


Xiamen Hanin Electronic Technology Co., Ltd.
ADD: 5F, 8#, Aide Airport Industrial Park, Huli District, Xiamen, China
WEB: www.hpert.com
E-mail: support@hpert.com

Packing List

■ Standard

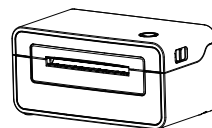

Printer

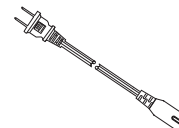


Power Supply



CD




 USB Cable



Quick Start Guide

■ Optional

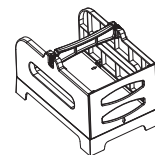


Label Holder For Rolls and Fan-Folding paper


⚠ Note: the packing materials are actually based on the order.

Appearance and Components


■ Front View

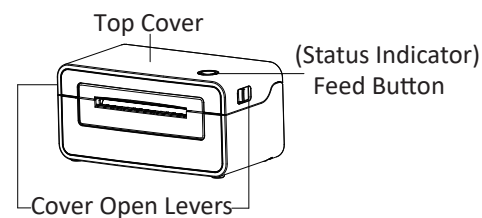

■ Rear View

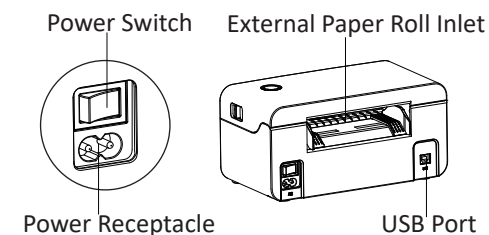


■ Inside View

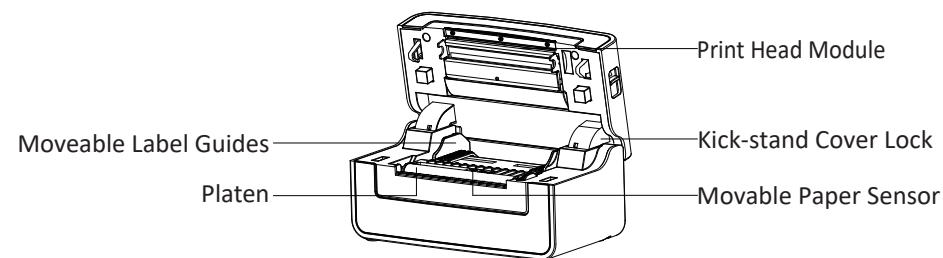

Power Connection

1. Make sure the power switch is in "off".
2. Connect the power cord to power receptacle.
3. Connect the other end of power cord to the outlet.

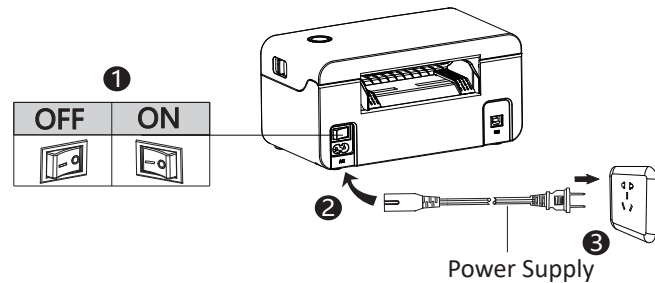


⚠ Note: Please refer to the SL42 User Manual for the tool and driver installation.


Loading the Media

■ Folding Paper Loading


1. Turn the power on, adjust the paper guides to fit the width of paper.

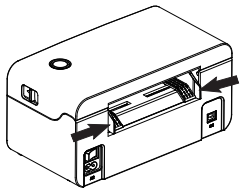


2. Insert the paper into the entry slot.

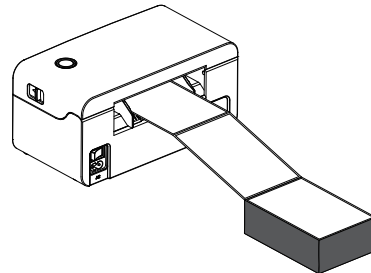

3. The paper will be sucked in the path automatically.

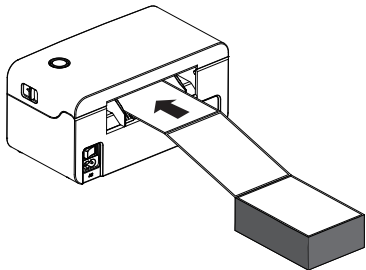

■ External Paper Roll Loading

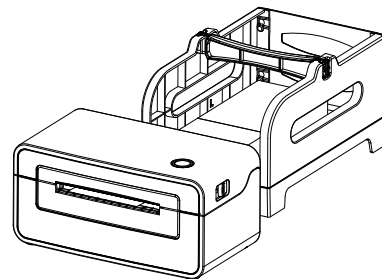

⚠ Note:

1. When the printer is power on, the paper will be inhaled into the path automatically.
2. The external paper roll holder needs to be aligned with the hooks at the bottom of the printer.

LED Description

Color	Light	Description
Blue	Always on	The printer is ready
Purple	Always on	The print head is over heat
Red	Always on	The cover is not closed
	Flash slowly	Paper out
Orange	Flash rapidly	Label learning is abnormal
	Always on	The printer is not ready yet
Green	Flash slowly	Paper jam, paper position is abnormal
	Always on	Printing
	Flash rapidly	Printing pause
	Flash rapidly	Receiving data

Feed Button Function

● Feed a label/a line

When printer is in READY status, short press FEED button, it will feed a label or a line, depending on the media you use.

● Print self-test page

When printer is in READY status, press and hold FEED button until the blue indicator light flashes once, then release the button and the printer prints a self-test page.

● Label calibration/learning

When printer is in READY status, press and hold FEED button until the blue indicator light flashes twice, then release the button and the printer starts label learning.

● Pause printing

When printer is in printing, short press FEED button to pause printing or feeding.

⚠ Note:

1. For more information about how to set the utility and driver installation please visit [SL42 User Manual](#) to download manuals.
2. For more service and support, please contact support@hpert.com.